



## How to configure RTSP stream?

To configure RTSP see instructions below;

RTSP stream from VLC player

1. Connect to the local network
2. Open VLC media
3. Open network stream
4. input the device local IP address, device username and password in the format below

EXAMPLE: `rtsp://admin:device verification code@device IP address on the LAN:554/H.264`

NOTE. the highlight marks is where you will input your info